

**SynopSYS™ Security Management Software**



WAN

**Long Range Radio Transmitter**



x1

**Plug-in Fast PSTN Modem**  
RP432MD2400A




x1 IP or Fast PSTN

**Plug-in IP Module**  
RW132IP0000A



**Plug-in GSM/GPRS Module**  
RP432GSM000A

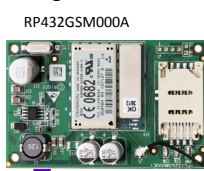

x1

WAN



**LightSYS Main Board**  
RP432M00000D

- 8-50 Zones
- 4 Partitions
- 4 Groups per Partition
- 4-32 Outputs
- 30 User Codes
- 500 Event Log
- Selectable Zone Resistance

**RISCO Cloud Server**




**Monitoring Stations**




**PC to Panel Cable**  
RW132EUSB00A



**Configuration Software**

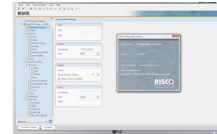

**www.riscocloud.com web interface**



WAN

**RISCOBUS**  
Save • Control • Win

- Main Panel RS485 Bus line supports up to 32 Bus devices: Keypads, Expanders, Bus Detectors & Sounders
- 300m max. length for Main Panel Bus line and for Detector Bus lines with standard alarm cable
- 1000m max. length per Bus line with shielded twisted pair Cat. 5 cable, and on condition Bus Test result is above 97%

**Voice Module**  
RP432EV0001C



x1

Non-Bus wiring

**Listen-in & Speak Module**  
RW132EVL000A



x4

**8 x 100mA O.C. Output Expander**  
RP296E08000A



x6 Output Expanders per system

**4 x 3A Relay Output Expander**  
RP296E04000A



**8 Zone Expander**  
RP432EZ0800A



x5 per system

Assign Single Zone Expanders to zones 9 & 10 and then add 8 Zone Expanders in order to reach 50 wired zones

**1.5A Power Supply**  
RP296EPS PCB  
RP296EPSP00A Boxed, EU




x4 Power Supply Expanders per system

**3A Power Supply**  
RP128EPS000A PCB  
RP128PSPSEUA Boxed, EU



**Elegant Keypads**  
RPKELW0000A  
RPKELPW0000A with prox  
RPKEL0B0000A black  
RPKELPW0000A black with prox



x4 wired keypads per system

**Touchscreen Keypads**  
RP128KP0200A  
RP128KPP200A with prox



**ProSYS Keypads**  
RP128KCL0ICA  
RP128KCLPICA with prox



**LightSYS Keypads**  
RP432KP0000A  
RP432KPP000A with prox



x8 per system

**Prox Key Readers**  
RP128PKR300A  
For Italian market




x2 per system

**Indoor Cube IP Cameras**  
RVCM11H0000A



**Outdoor Bullet IP Cameras**  
RVCM5200E0100A

**Bus Zone Expander**  
RP128EZB000B  
Acts as Bus isolator and Bus detector concentrator

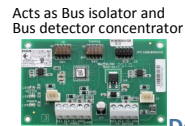

x4 Bus Zone Expanders per system

**WatchOUT**



**WatchOUT NG**



**Industrial Lunar**



**BWare Bus**



**Seismic Detector**



**Single Zone Expanders**  
RP128EZ0100A



**Detector Bus Lines**

Up to 512 Bus Detectors per system  
Up to 32 per Bus Zone Expander, or directly on main panel Bus, with shielded twisted pair Cat. 5 cable  
Up to 20 Bus Detectors recommended per Bus Zone Expander or on main panel Bus, for better performance with regular alarm cable, and for higher security

**ProSound**



x4 sounders per system



**Lumin8**



**Wireless BWare DT**



**Wireless Door/Window Contacts**



**Wireless CO & Gas Detectors**



x50 wireless detectors per system  
x32 per Wireless Expander



**Wireless Sounders**

x4 wireless sounders per system  
x3 per Wireless Expander



**Wireless Curtain PIR**



**WL Smoke & Heat Detector**



**Wireless Flood Detector**



**2-Way Wireless Slim Keypads**



x4 wireless keypads per system  
x2 per Wireless Expander

**2-Way Keyfob**



x16 Rolling Code Keyfobs per system  
x16 per Wireless Expander

**1-Way Keyfob**



**Panic Keyfob**



x50 Zone/Panic Keyfobs per system  
x32 per Wireless Expander

**Wristband Panic**

